
# Meade LX85 Quickstart Guide

Before assembling your telescope, visit the Meade LX85 resources page to access instructional videos, manuals, quick start guides and download our AutoStar Suite Planetarium Software. <a href="https://www.meade.com/content/lx85-support-resources">https://www.meade.com/content/lx85-support-resources</a>



**SCAN ME** 

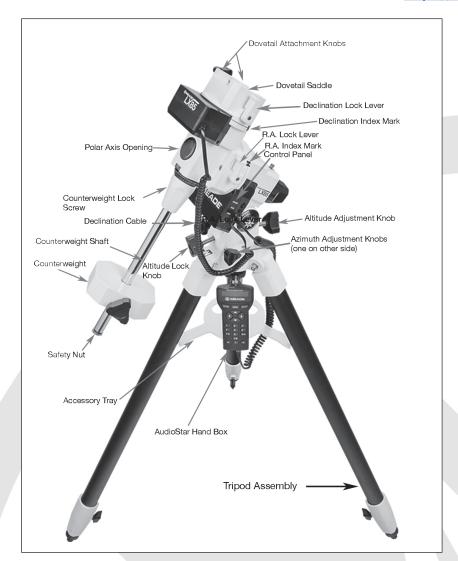


## **ACF Optical Tube Overview** Front Dust Finder Scope (not shown) Adjustment Thumbscrews Visual Back Eyepiec Diagonal Mirror


#### **Reflector Optical Tube Overview**




Open the tripod, extend the legs, **STEP** and adjust height as needed. Orient North Peg to face north.


**STEP** Assemble Accessory Tray as shown. Attach the LX85 mount to the tripod.

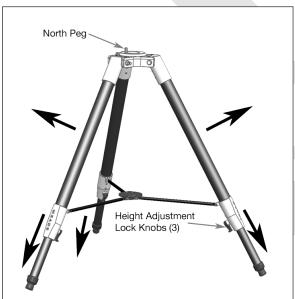

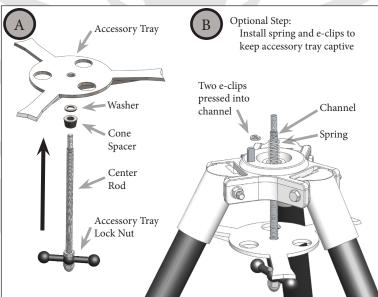


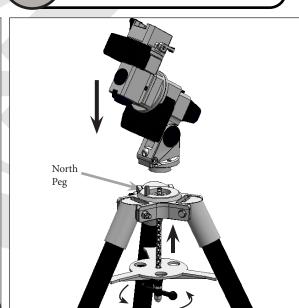


Install Latitude and Azimuth Adjustment knobs.

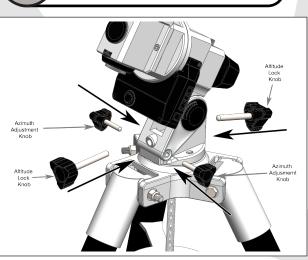

Adjust to local latitude using Altitude Adjustment and Lock Knobs

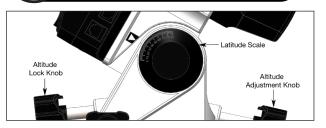

Attach the Counterweight Shaft and Counterweight(s).

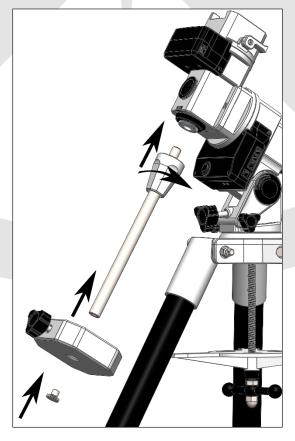

Install the Optical Tube and secure STEP with 2 locking knobs.



Connect the AudioStar and Cables: AudioStar to 'HBX' Declination Cable to 'Dec'. See below images for reference.



Balance the R.A. Axis


Unlock the R.A. Lock Lever and position horizontally. Reposition Counterweight as needed to balance RA axis.



**Balance the Dec Axis** 

Unlock the Dec Lock Lever, and position horizontally. Reposition the optical tube forward/backward as needed until optical tube does not rotate when DEC axis is unlocked.

**NOTE:** When making adjustments, always put the scope into the Home position, then adjust.

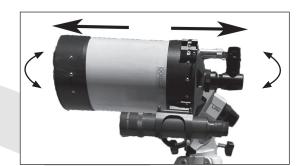




Dec Cable

STEP Align the Viewfinder


Center a distance object in the eyepiece. Don't move the telescope and use the viewfinders adjustment screws to center the viewfinder on the same object.

**Rough Polar Alignment** Align the Home Position Index Marks. Point tripod assembly North (for northern hemisphere). This is the Home Position and the telescopes starting position.

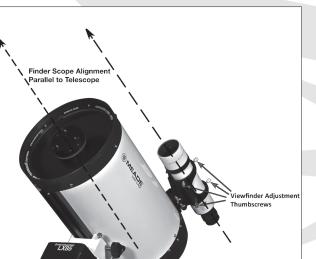



### **Starting Home Position**

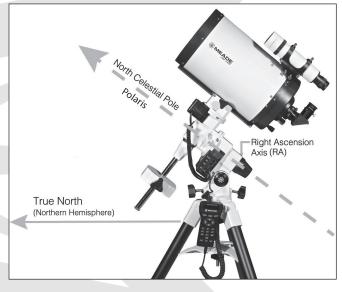

STEP Connect to a 12V DC Power Source.



Power the Mount On.



Align with AudioStar

The handbox will show "Press 0 to Align, Mode for Menu".

Press 0 to perform a night sky alignment.

Press MODE to navigate AudioStars menus to set date, time, and location information. This will allow accurate go-to pointing and track-

Refer to the full LX85 instruction manual for more information about the usage of the AudioStar and its features. https://www.meade.com/content/lx85-support-resources

SCAN ME



7. Scroll Keys 8. Serial Port

9. Coil Cord

#### **Meade Instruments Warranty**

The Meade Instruments Statement of Limited Warranty is published at: <a href="www.meade.com/supports/warranty/">www.meade.com/supports/warranty/</a>

A printed copy of the Meade Statement of Limited Warranty will be made available by Meade upon written request. See below for Meade contact information.

Warranty Claim

Meade Instruments

89 Hangar Way

Watsonville, CA 95076 U.S.A • +1 (800) 626-3233

customerservice@meade.com • SUBJECT: Warranty Claim





